



# ew 100 G4

EM 100 G4  
SKM 100 G4  
SKM 100 G4-S  
SK 100 G4

Quick Guide  
Kurzanleitung  
Guide rapide  
Guia rápida  
Guia de início rápido  
Guia rápido  
Beknopte handleiding  
Krótka instrukcja obsługi  
Snabbguide

Kort vejledning  
Pikaohje  
Γρήγορος οδηγός  
Kısa Kılavuz  
Краткая инструкция  
快速指南  
快速使用指南  
クイックガイド  
퀵 가이드

SENNHEISER



[www.sennheiser.com/download](http://www.sennheiser.com/download)

Sennheiser electronic SE & Co. KG


Am Labor 1, 30900 Wedemark, Germany  
[www.sennheiser.com](http://www.sennheiser.com)

Printed in Germany, Publ. 11/24, 575860/A05


## EM 100



## SKM 100

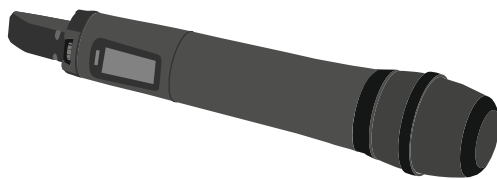


## SKM 100-S

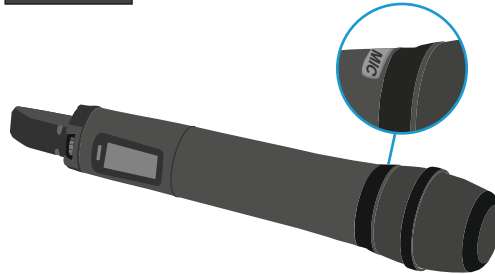



## SK 100



## Battery



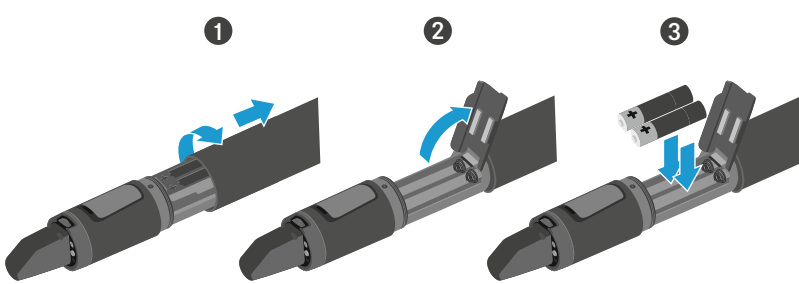


## Low Battery

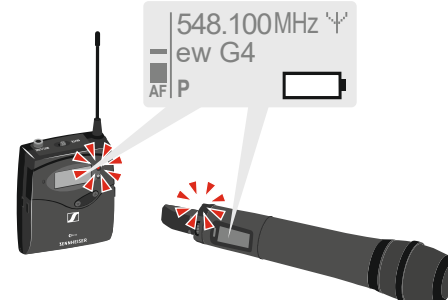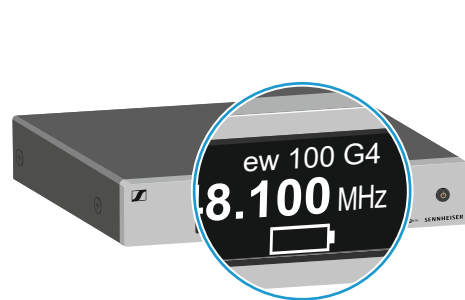


|          |       |         |
|----------|-------|---------|
|          | 100 % | > 8 h   |
|          | 70 %  | 4 - 6 h |
|          | 30 %  | 2 - 3 h |
| LOW BATT |       |         |


## Setup

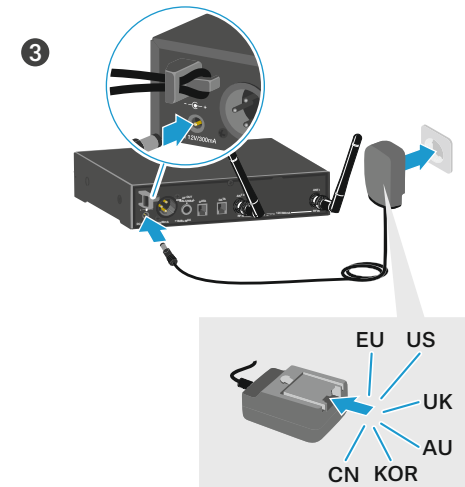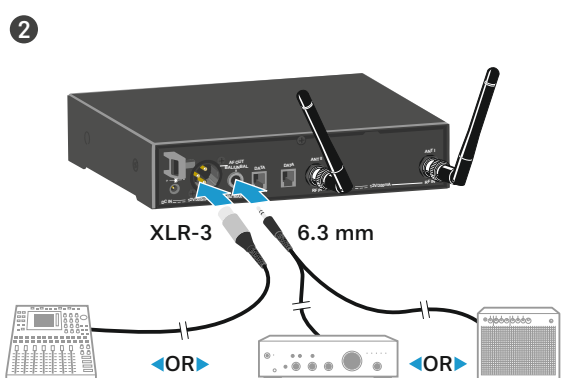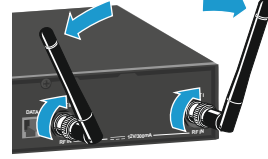


## On

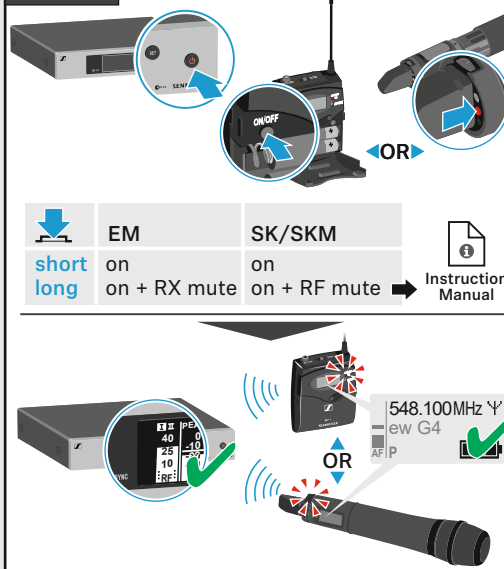



## Off

 


## Menu

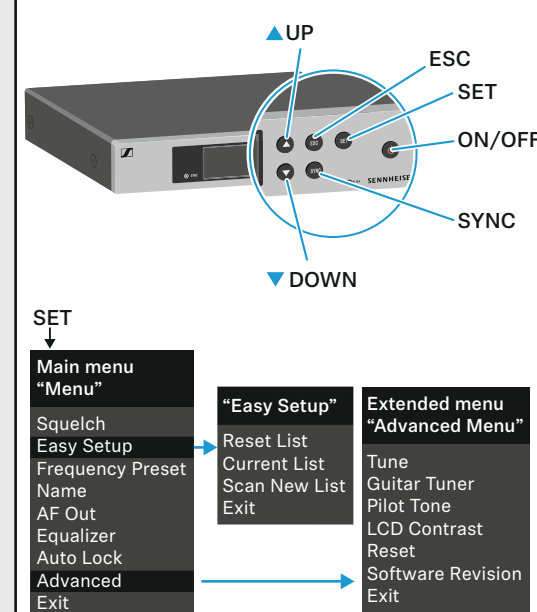

## Standard display

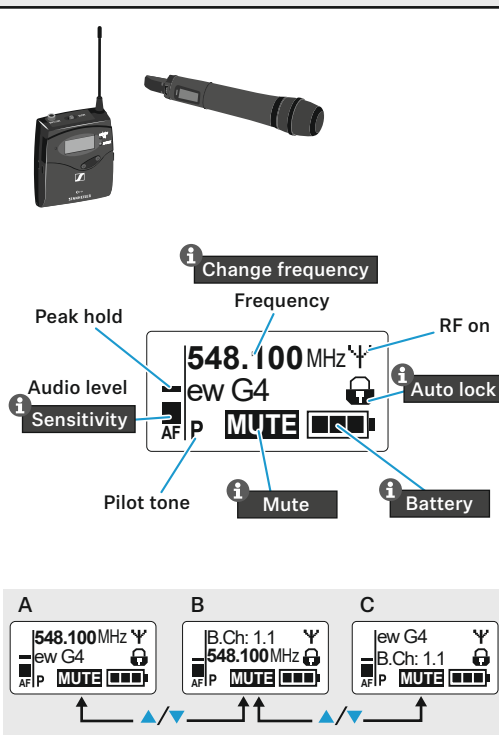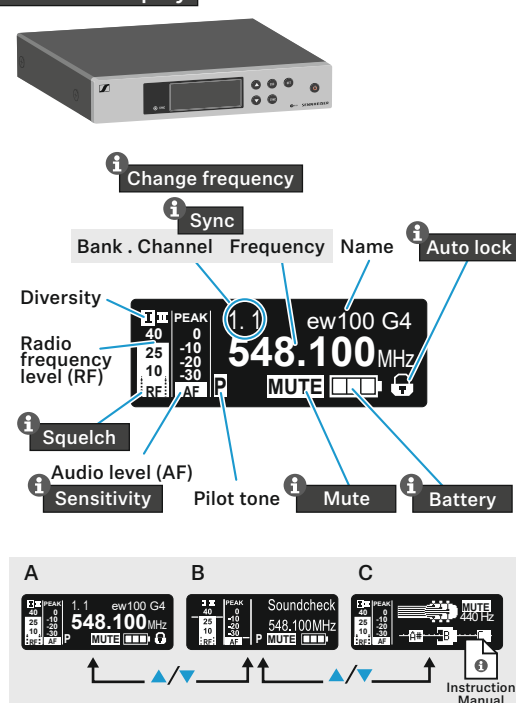

## Menu

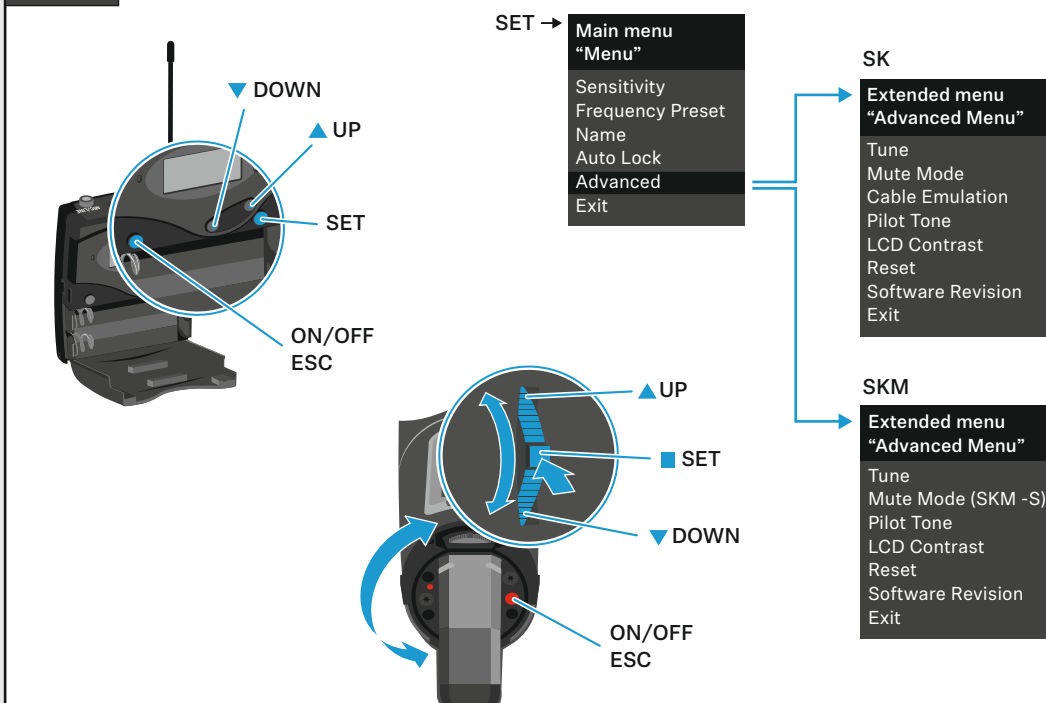

Auto lock

EM

1 2 3

Locked  $\Delta/\nabla$  Unlock?

SET  $\Delta/\nabla$  SET

SK

1 2 3

Locked  $\Delta/\nabla$  Unlock?

SET  $\Delta/\nabla$  SET

SKM

1 2 3

Locked  $\square$  Unlock?

SET  $\square$  SET

10 s → Auto lock

Instruction Manual

Mute

EM 100

short

Instruction Manual

RX Mute On?  $\Delta/\nabla$  SET

RX Mute Off?  $\Delta/\nabla$  SET

SKM 100

short

RF Mute On?  $\Delta/\nabla$  SET

RF Mute Off?  $\Delta/\nabla$  SET

New frequency

Squelch

1

High Middle Low

40 25 10 RF

Change frequency

2 SKM/SK off!

3

| Easy Setup EM                                                   | Frequency Preset EM, SK, SKM                    |
|-----------------------------------------------------------------|-------------------------------------------------|
| Menu Easy Setup $\Delta/\nabla$ SET                             | Menu Frequency Preset $\Delta/\nabla$ SET       |
| Easy Setup Scan New List $\Delta/\nabla$ SET                    | Frequency Preset B.Ch. 1.1 $\Delta/\nabla$ SET  |
| Scan New List 734 ... 776 MHz WAIT 30s                          | Frequency Preset B.Ch. 15.6 $\Delta/\nabla$ SET |
| Easy Setup Bank 1 ... 20 Free: 0 ... 12 $\Delta/\nabla$ SET     | Frequency Preset B.Ch. 15.6 $\Delta/\nabla$ SET |
| Easy Setup B.Ch: 1. 1...12 Sync 758.200 MHz $\Delta/\nabla$ SET | Stored                                          |
| Stored                                                          |                                                 |

No frequency → 1 Squelch: Middle ...

Instruction Manual

Sync

4

≤ 10 cm ≤ 4"

OR

✓ SYNC

OR

✗ SYNC

Instruction Manual

SK 100

Menu Advanced  $\Delta/\nabla$  SET

Advanced Mute Mode  $\Delta/\nabla$  SET

Mute Mode AF On/Off  $\Delta/\nabla$  SET

SK only: Mute Mode RF On/Off  $\Delta/\nabla$  SET

AF Mute Mute On Mute Off

RF Mute Mute On Mute Off

SKM 100-S

Multichannel - Easy Setup

Bank 1 ... 20; U

Channel 1 ... 12

max. 12 channels

>12 channels → Instruction Manual

RJ 10

Instruction Manual

Sensitivity

5

Menu Sensitivity  $\Delta/\nabla$  SET

-60 dB ... 0 dB

-48 dB ... 0 dB

AF PEAK

AF out

6

Menu AF Out  $\Delta/\nabla$  SET

+18 dB

LEVEL

-24 dB ... +24 dB

SKM

SKM

ME 2 | ME 4

ME 2

ME 4

ME 3-II

ME 2 | ME 4

ME 2

25 cm (10")

ME 4

ME 3-II

2...3 cm (1")