



ew 100 P G4 / ew 500 P G4

EK 100 G4
SKP 100 G4
SKM 100 G4
SK 100 G4

EK 500 G4
SKP 500 G4
SKM 500 G4
SK 500 G4

Quick Guide
Kurzanleitung
Guide rapide
Guia rápida
Guía de inicio rápido
Guia rápido
Beknopte handleiding
Krótka instrukcja obsługi
Snabbguide

Kort vejledning
Pikaohje
Γρήγορος οδηγός
Kısa Kılavuz
Краткая инструкция
快速指南
快速使用指南
クイックガイド
퀵 가이드

SENNHEISER



www.sennheiser.com/download

Sennheiser electronic SE & Co. KG
Am Labor 1, 30900 Wedemark, Germany
www.sennheiser.com
Printed in Germany, Publ. 11/24, 575862/A05

EK 100



SKP 100




SK 100/SKM 100

SK 100



SKM 100

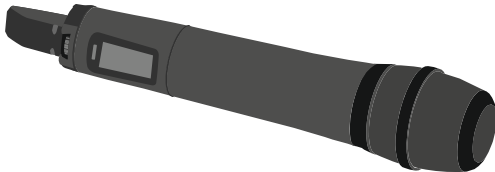

EK 500



SKP 500




SK 500/SKM 500

SK 500




SKM 500

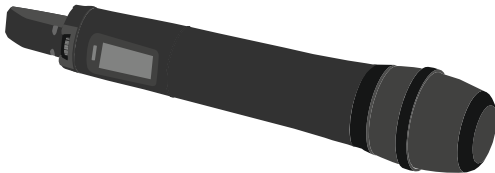


Battery


EK/SK

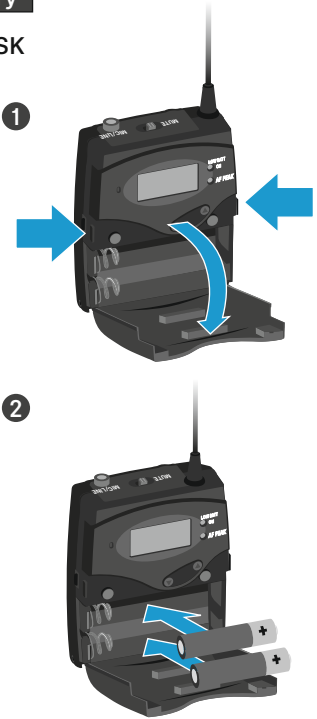

SKP

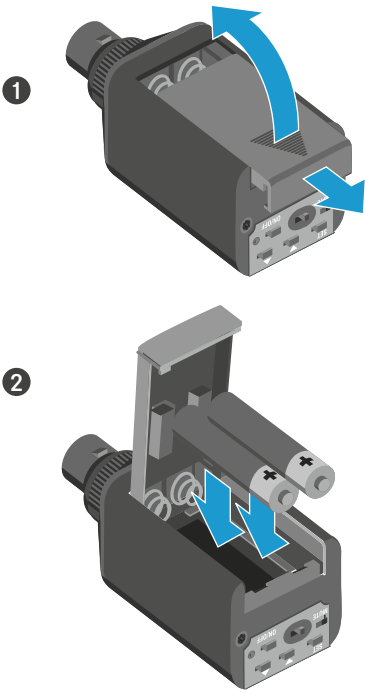

SKM

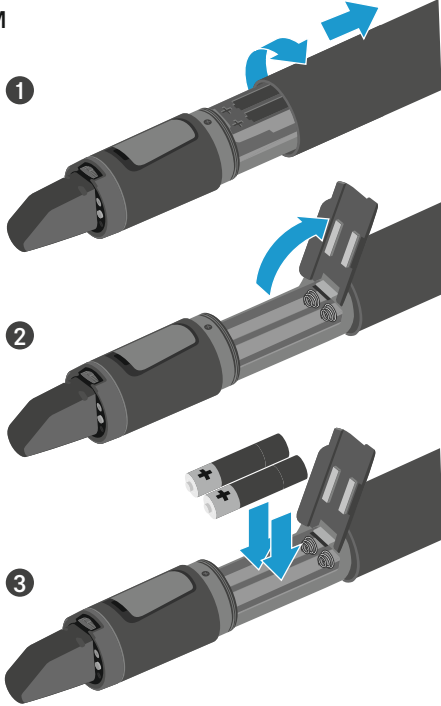


On/Off

	EK	SK/SKM/SKP	
	on	on	Instruction Manual
	-	on + RF Mute	
	off	off	

Battery

	100 %	> 8 h
	70 %	4 - 6 h
	30 %	2 - 3 h
LOW BATT		

Menu

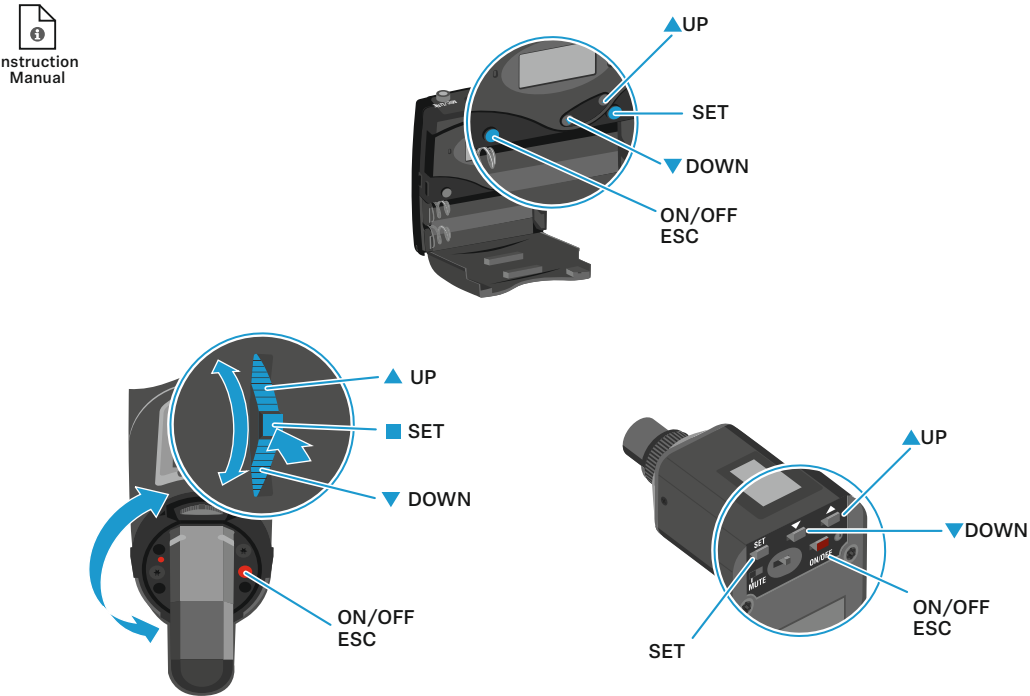

EK 100

Main menu "Menu"	"Easy Setup"	Extended menu "Advanced Menu"
Sync	Reset List	Tune
Squelch	Current List	Pilot Tone
Easy Setup	Scan New List	LCD Contrast
Frequency Preset	Exit	Reset
Name		Software Revision
AF Out		Exit
Auto Lock		
Advanced		
Exit		

EK 500

Main menu "Menu"	"Easy Setup"	Extended menu "Advanced Menu"
Sync	Reset List	Tune
Phones Volume	Current List	Sync Settings
Squelch	Scan New List	Pilot Tone
Easy Setup	Exit	LCD Contrast
Frequency Preset		Reset
Name		Software Revision
AF Out		Exit
Auto Lock		
Advanced		
Exit		

SK/SKM/SKP 100


Main menu "Menu"	Extended menu "Advanced Menu"
Sensitivity	Tune
Frequency Preset	Mute Mode (SK/SKP)
Name	RF Power
Auto Lock	Cable Emulation (SK)
Advanced	Pilot Tone
Exit	LCD Contrast
	Reset
	Software Revision
	Exit

SK/SKM/SKP 500


Main menu "Menu"	Extended menu "Advanced Menu"
Sensitivity	Tune
Frequency Preset	Mute Mode (SK/SKP)
Name	RF Power
Auto Lock	Cable Emulation (SK)
Advanced	Phantom Power 48 V (SKP)
Exit	Pilot Tone
	LCD Contrast
	Reset
	Software Revision
	Exit

Display

EK

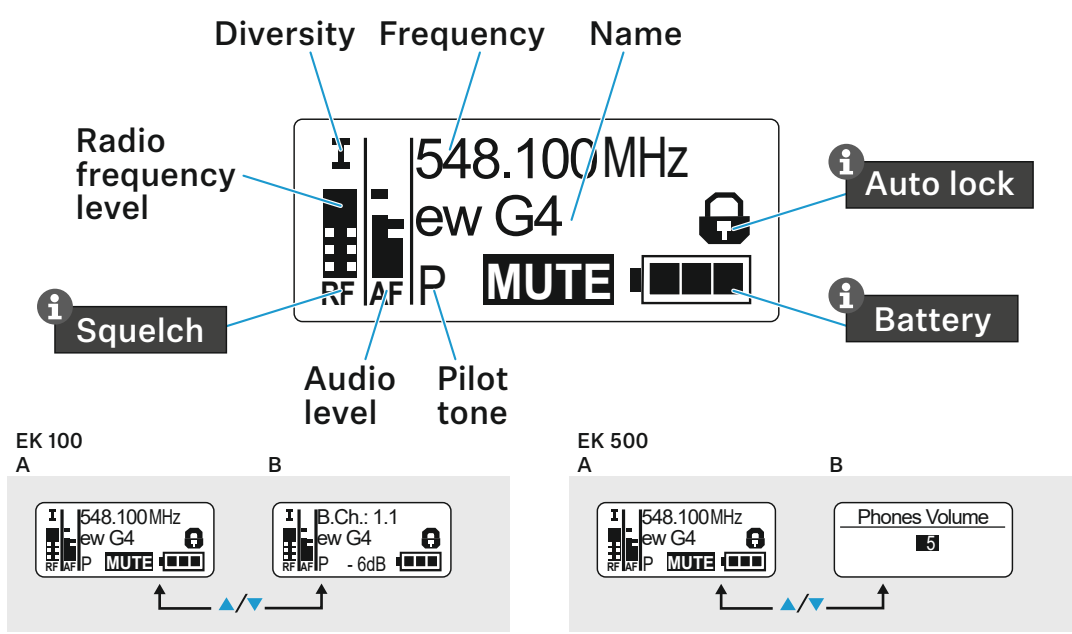


SK/SKP/SKM

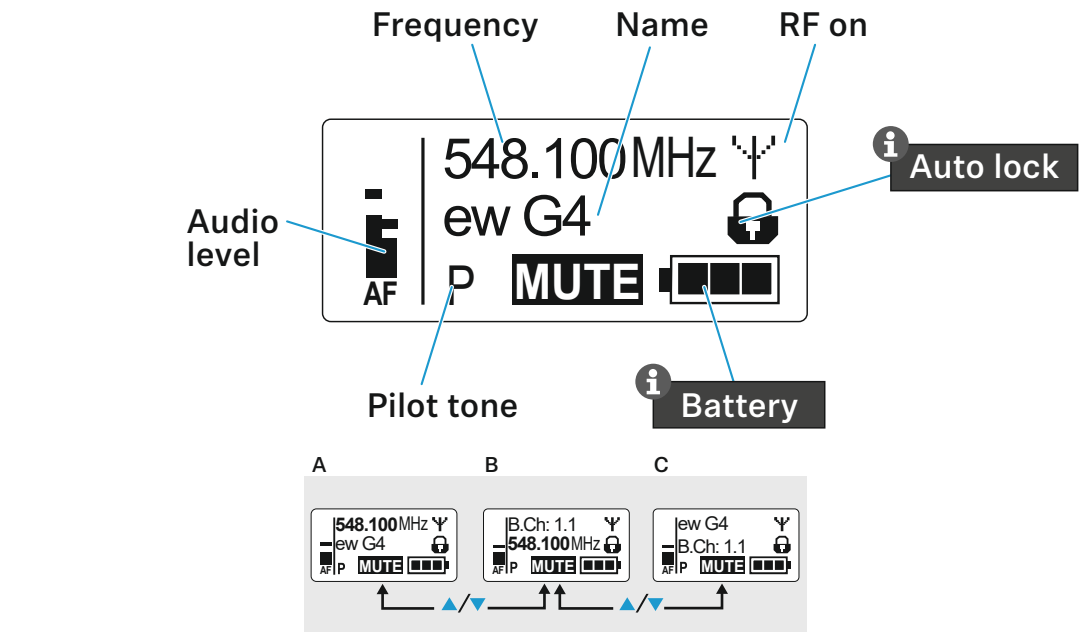


Mute

SK/SKP

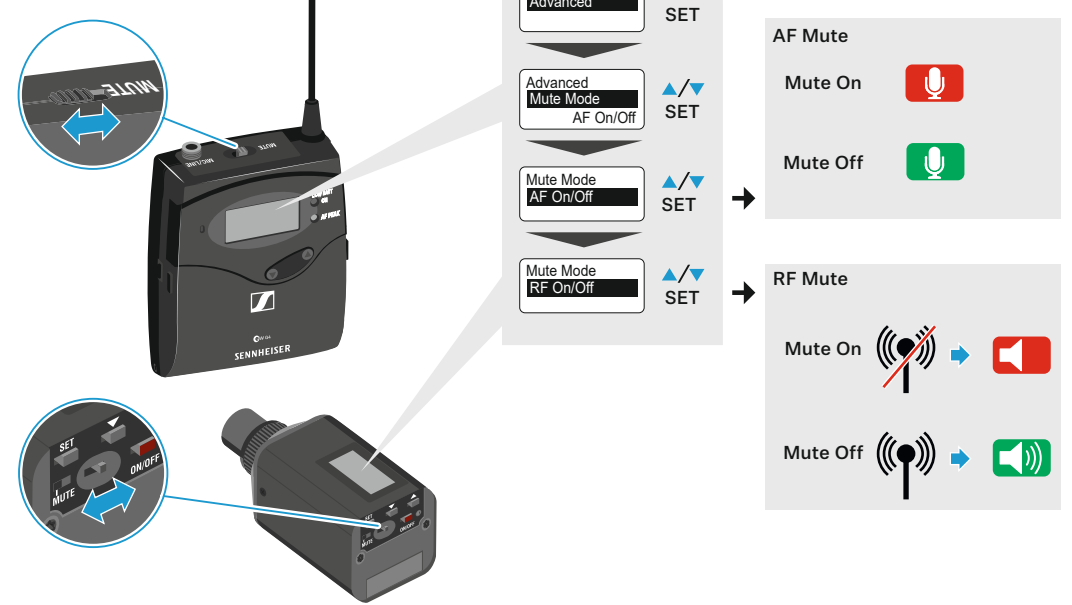


Camera adapter CA 2

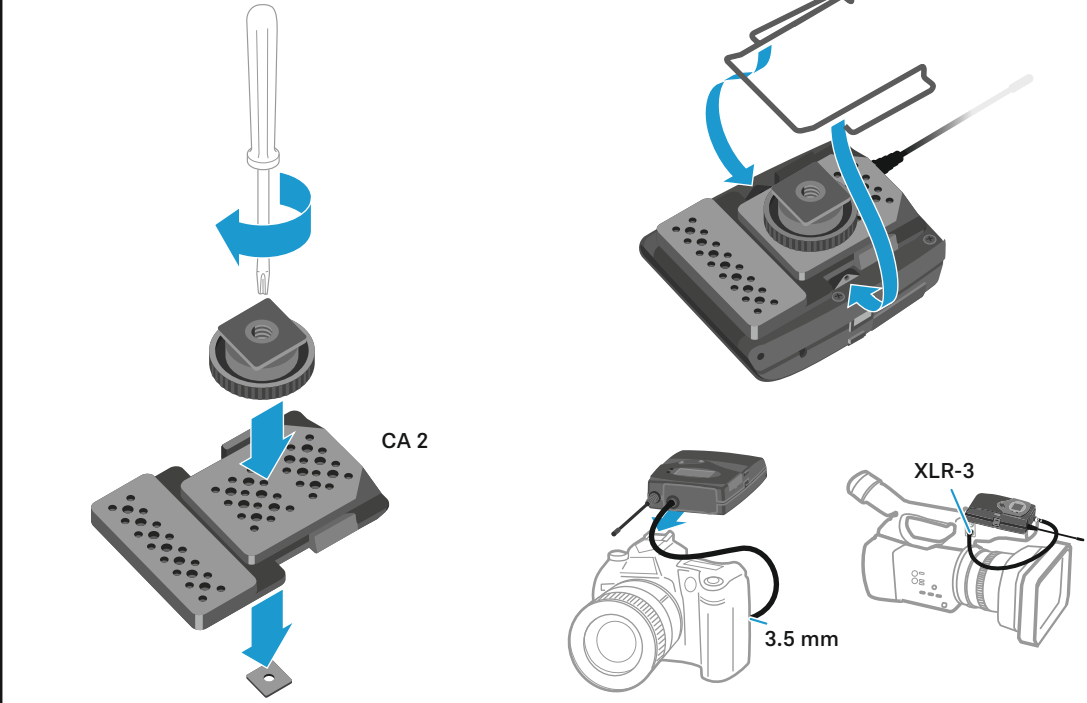


Mute

SKM

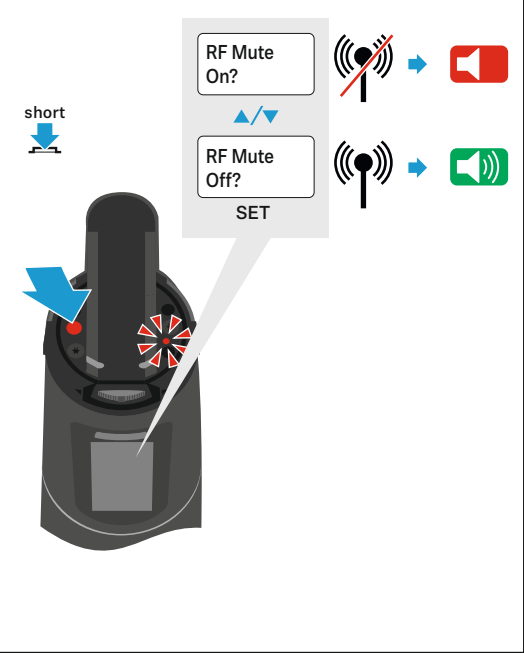


Phones

EK 500

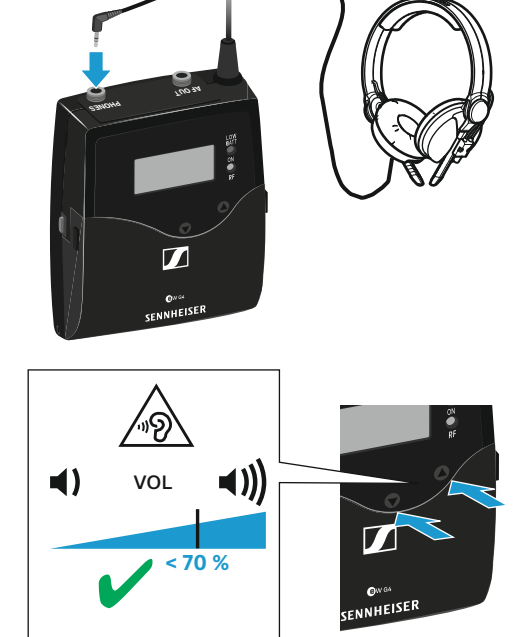


Setup Audio Level


SKP/SKM/SK

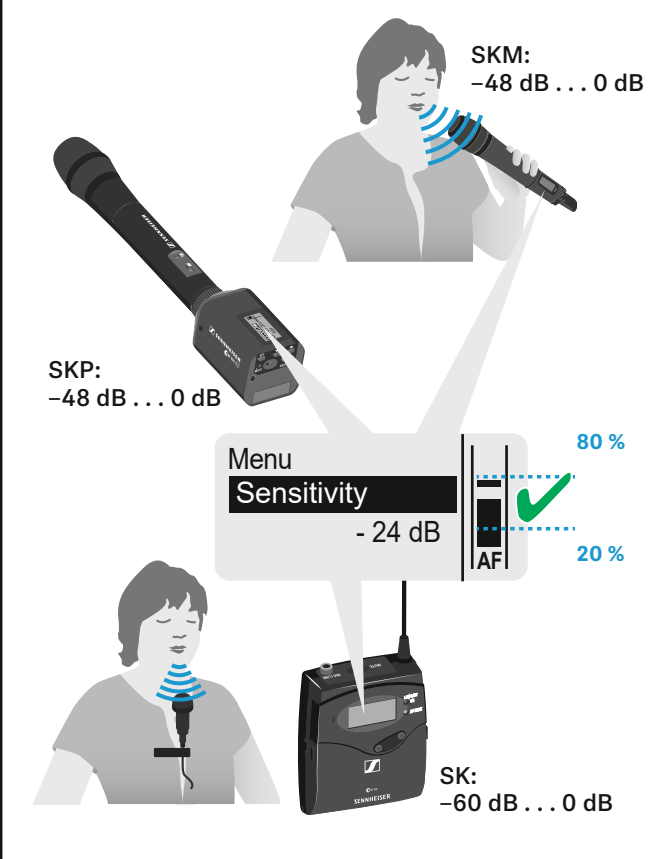

EK

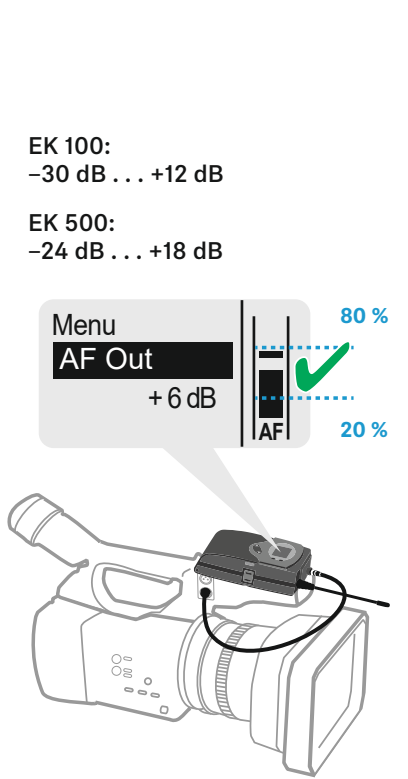

Mic position

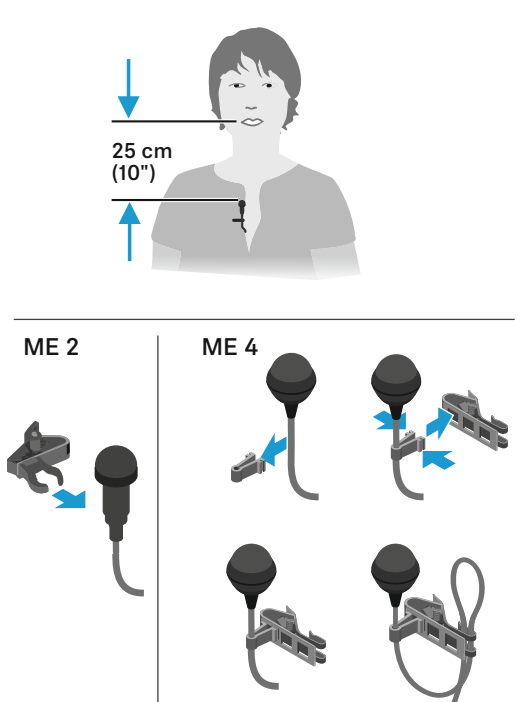

ME 3

