



Digital 6000

LM 6060
LM 6061
LM 6062
LM 6070

Quick Guide
Kurzanleitung
Guide de démarrage rapide
Guida rapida
Instrucciones resumidas
Instruções resumidas
Beknopte gebruiksaanwijzing
Krótka instrukcja obsługi
Snabbguide

Kort vejledning
Pikaohje
Σύντομες οδηγίες
Kısa Kılavuz
Краткая инструкция
快速指南
快速使用指南
クイックガイド
요약 안내서

SENNHEISER

Digital 6000
System Instruction Manual




www.sennheiser.com/download

Sennheiser electronic SE & Co. KG


Am Labor 1, 30900 Wedemark, Germany
www.sennheiser.com

Printed in Germany, Publ. 03/25, 597252/A03

LM 6060

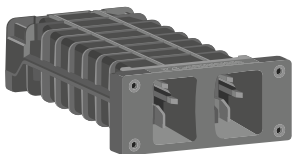


LM 6061

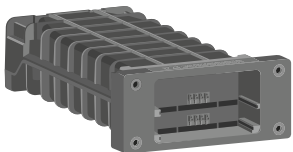

LM 6062




LM 6070

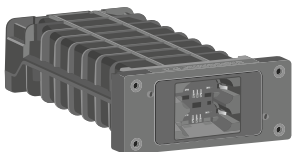



Setup

L 6000

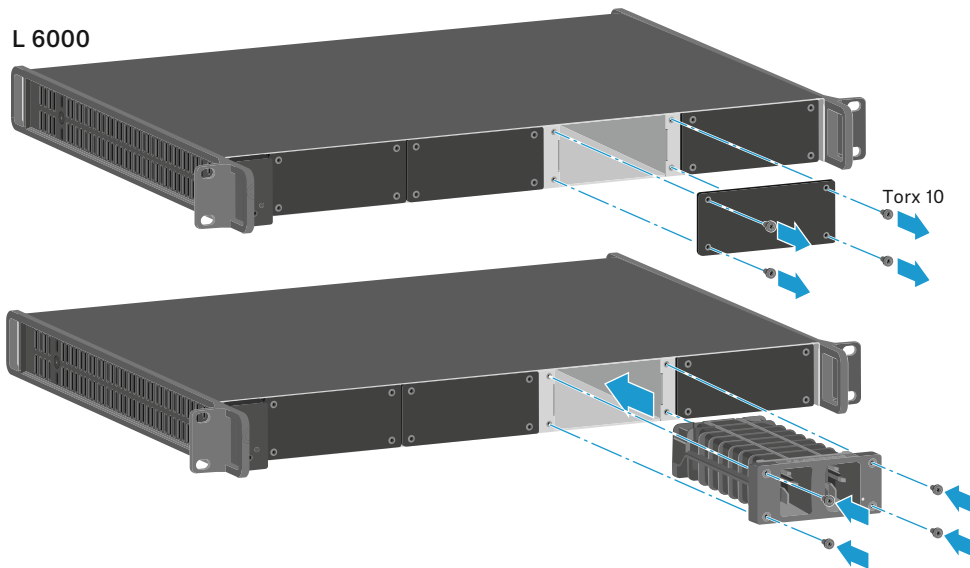

Always use the latest firmware of the L 6000 for full functionality.
The latest firmware is available for download at www.sennheiser.com/download.

Charging

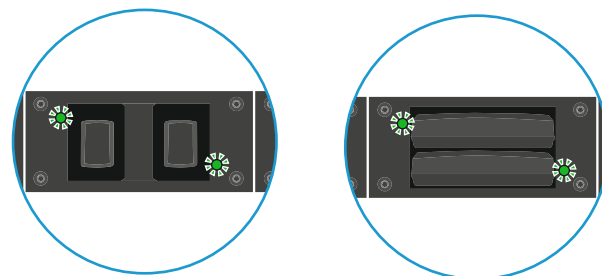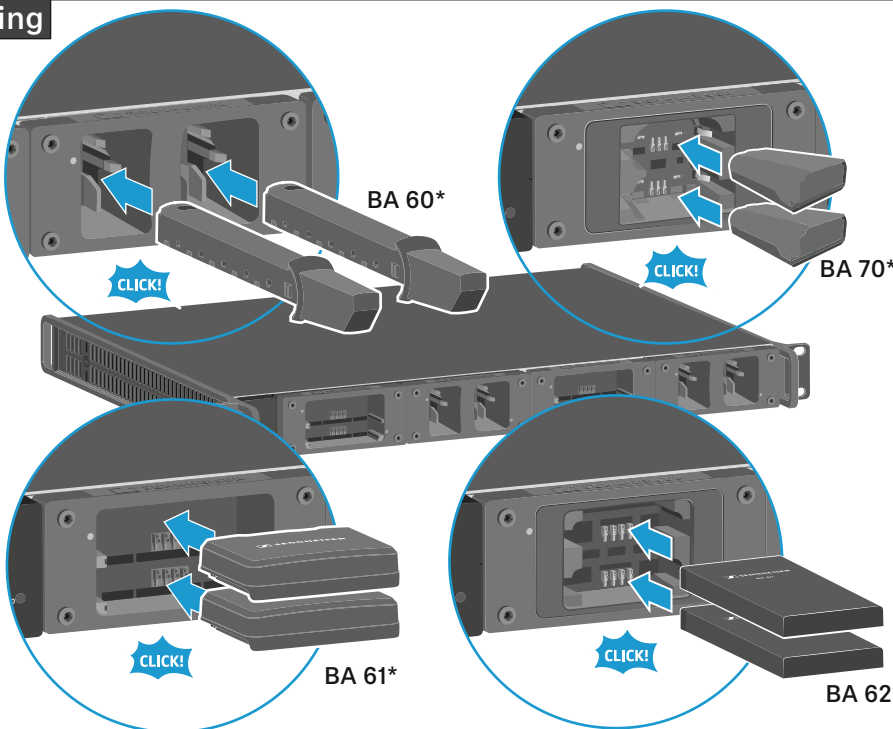

	Temp out of range, charging stopped
	Battery damaged
	Battery in regeneration
	Charging 0 % – 80 %
	Charging 81 % – 96 %
	Fully charged

* to be ordered separately